

**MODEL: SF-608R, SF-609**  
**Instruction on Checking the Floater:**

1. Remove the two screws from the back of the unit near the top (IMG-01).



<IMG-01>

2. Take off the back (IMG-02).




<IMG-02>

3. Locate the floater. (IMG-03).



<IMG-03>


4. Lift up the floater a few times. If the floater floats, go to Step 8. If the floater still sinks to the bottom, check whether the floater is hollow by putting your finger into the floater from the right (IMG-04).

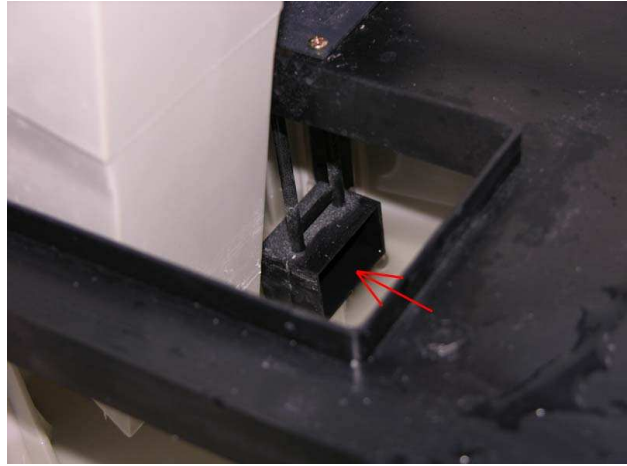

<IMG-04>

5. If the floater is hollow, search for a white plastic rectangular cube (IMG-05).

**⚠ IMPORTANT:** This white plastic rectangular cube can be anywhere in the unit. Please search carefully.

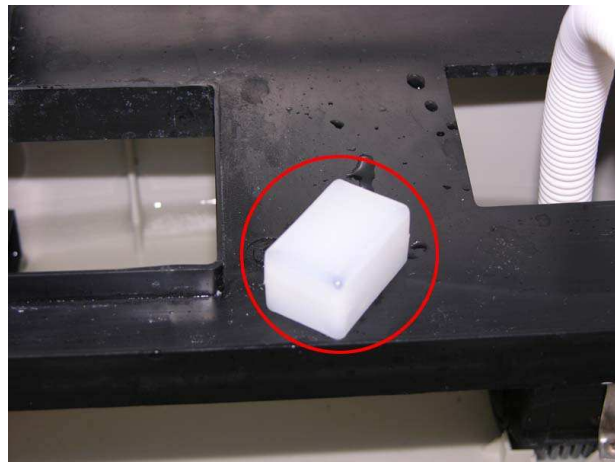

<IMG-05>

6. Insert the white plastic rectangular cube into the floater (IMG-06).
7. Check whether the floater floats.
8. Put the unit back together.

**ⓘ** When putting the unit back together, please make sure the white hose on the left goes back to the water tank and the black mesh is not caught anywhere.



<IMG-06>