



INSTRUCTIONS MANUAL




1.8L Electric Kettle with Multi-Temp Feature

- SK-1800R (Red)
- SK-1800SS (Stainless Steel)

NAME OF COMPONENTS



CONTROL PANEL

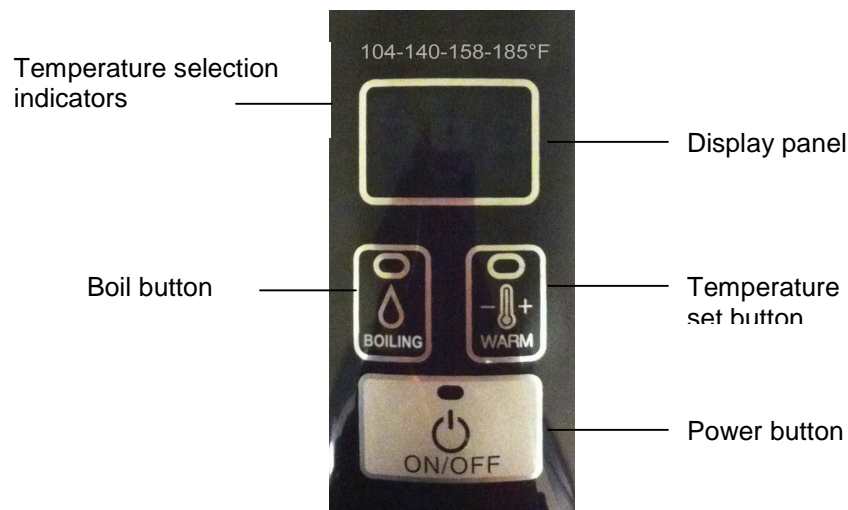

FEATURES

- Hold Temp function: 104 – 140 – 158 - 185°F.
- Cordless body with 360-degree rotation.
- Fast boiling, time and energy efficient.
- Multi-protection device: dry boil protection, overheat sensor, overheat thermostat and overheat fuse cut-off.
- Micro-computerized control.

IMPORTANT SAFEGUARDS

READ ALL INSTRUCTIONS

- Carefully read all instructions before operation and save for future reference.
- This appliance is designed specifically for the purpose of heating and boiling drinking quality water only. Never use this product to heat or boil any other liquids or foodstuffs.
- Do not place kettle near the edge of a counter or table.
- Place unit on a surface that is level, clean and free of water.
- Do not place kettle on or near a hot surface, i.e. stove or heated oven.
- The kettle emits steam when water boils, keep a safe distance from walls, curtains, other appliances or steam sensitive materials.
- The kettle can only be used with the supplied power base.
- Do not operate kettle with an external timer or remote control system.
- Do not touch hot surfaces. Use the handle for lifting and carrying the kettle.
- Always power off the kettle and remove power plug from the outlet before attempting to move the kettle, when not in use and before cleaning and storing.
- Use caution when pouring water from the kettle, boiling water and steam will scald.
- Do not immerse kettle, base or power cord in water or other liquid.
- Do not open the lid during operation to prevent scalding.
- The use of accessories not recommended by the manufacturer may result in fire, electric shock or injury to persons.
- Do not let the cord hang over the edge of table or counter; touch hot surfaces or become knotted.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with this appliance.
- Inspect the appliance regularly. Do not use if kettle shows signs of damage to the power cord, plug or appliance.
- Do not plug with wet hands.
- Do not plug into a socket where several other appliances are plugged in.
- Do not plug into a socket that is less than 10 amps
- Do not use if cord is damaged or if plug does not fit correctly into the socket.
- Do not modify any parts or repair any parts by yourself.
- Do not use near open flame or main heat source or in wet environment
- This appliance is for household use only. Do not use this appliance other than its intended use.

SPECIFICATION

Capacity: 1.8L

Voltage / Frequency: 120V~ 60Hz

Power consumption: 1300W

OPERATING INSTRUCTIONS

BEFORE FIRST USE

Remove and discard any packaging material or promotional labels. Fill the kettle with cool tap water, bring to boil and discard the water.

FUNCTIONS

STAND-BY mode

- After connecting power, unit will self-examine; all indicator lights will illuminate for 1 second, unit beeps once and display flashes "888" if no errors found. Unit then enters stand-by mode: display shows present temperature of water inside the kettle.
- Kettle is now connected to power and ready to use.

BOIL function

- Press the ON/OFF button (indicator light illuminates)
- Press the BOILING button (indicator light illuminates)
- Kettle will now begin to boil water. Once water has boiled (at approx. 210°F), kettle will beep 5 times and return to stand-by mode.

Note:

- If kettle is lifted/removed from base during the boiling process, boiling is cancelled and kettle returns to stand by mode.
- If the ON/OFF button is pressed during the boiling process, boiling is cancelled and after 1 minute of sitting idle, kettle will return to stand by mode.

WARM function

- This kettle has the ability to maintain water temperature at one of four preset temperatures: 104 – 140 – 158 - 185°F
- Press the ON/OFF button (indicator light illuminates)
- Press the WARM button repeatedly until desired temperature setting is selected.
- Kettle will heat water to set temperature and hold at that temperature, +/- 10 degrees.

Note:

- Pressing the ON/OFF button in warm mode will cancel temperature selection and kettle returns to stand-by mode.
- If kettle is lifted and replaced within 30 seconds, set temperature will remain.

DRY-BOIL PREVENTION

- To prevent dry-boil, the unit will first check for water within the pot before boiling or before reheating water.
- This process takes about 75 seconds, during which you will hear a few soft clicks.
- If unit senses there is no water, kettle will power off and display will show code "E0".

WARNING

- Ensure lid is firmly in place, position kettle securely onto the power base.
- Do not use kettle to heat any other liquid except water.
- Always fill water in between the MIN and MAX line. Never fill above MAX line, water may boil over and cause scalding.

WATER WINDOW COLOR INDICATION

Blue light = cool to 105°F*

Green light = 106°F*

Purple light = 150°F*

Red light = 168°F*

* +/- 1°F

CLEANING

- Remove plug from power source.
- To remove calcium buildup, add some white vinegar in the kettle and fill with water to the MAX line. Heat water to boiling and allow the solution to soak for 30 minutes. Flush the kettle with clean water.
- Wipe the kettle's body with damp cloth.



Your Guarantee

If this product is found to be faulty as a result of faulty materials or workmanship within one year from date of purchase, it will be repaired free of charge.

This guarantee is subject to the following terms:

- Sunpentown must be notified of the fault.
- Proof of purchase must be presented to Sunpentown's nominated representative.
- The warranty will be void if the product is modified, misused or repaired by an unauthorized person.
- The warranty after repair will not be extended beyond the original one-year period.
- All replacement parts will be new or reconditioned.
- Parts, which are replaced, become the property of Sunpentown.
- The warranty applies for the use of the product in the USA only.

What is NOT COVERED:

- Warranty does not include freight charges.
- Incidental or consequential damage caused by possible defects with this product.
- Damage to product caused by improper power supply voltage, accident, fire, floods or acts of nature.
- Failure of product resulting from unauthorized modifications to the product.
- Improper installation or failure to perform the necessary maintenance.

This GUARANTEE is in addition to your Statutory Rights

SUNPENTOWN INTERNATIONAL INC.
14625 Clark Ave. City of Industry, CA 91745
Tel: 800-330-0388
service@sunpentown.com
www.sunpentown.com