 




# INSTRUCTION MANUAL

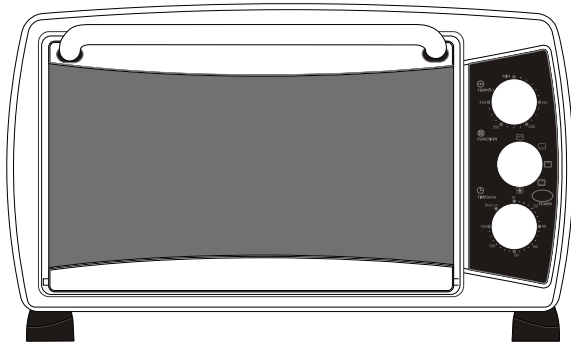

**SO-1006**

**CONVECTION COUNTERTOP OVEN**

## IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed, including the following:

1. Read all the instructions.
2. Do not touch hot surfaces. Use handles or knobs.
3. To protect against electrical hazards, do not immerse cord, plug, or the appliance in water or any other liquid.
4. Close supervision is necessary when any appliance is used by or near children.
5. Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts; and before cleaning the appliance.
6. Do not operate any appliance with a damaged cord or plug; or after the appliance mal-functions or has been damaged in any manner. Contact Sunpentown for examination, repair or adjustment.
7. The use of accessories not recommended by the manufacturer may cause injuries.
8. Do not use outdoors.
9. Do not let cord hang over edge of table or counter or touch hot surfaces.
10. Do not place near a hot gas or electric burner or in a heated oven.
11. Extreme caution must be used when moving an appliance.
12. To disconnect, turn any control to "OFF", then unplug from wall outlet.
13. This appliance is for Household Use Only. Do not use appliance for other than intended use.
14. Do not place oversize foods or metal utensils inside the toaster-oven as they may create a fire or risk of electric shock.
15. A fire may occur if the toaster-oven is covered or touching flammable material, including curtains, draperies, walls and the like, when in operation. Do not store/place any item on top of the appliance when in operation.
16. Do not clean with metal scouring pads. Pieces can break off the pad and touch electrical parts resulting a risk of electric shock.
17. Extreme caution should be exercised when using containers constructed of other than metal or glass.
18. Do not store any materials, other than manufacturers recommended accessories, in this oven when not in use.
19. Do not place flammable material in the oven, such as: paper, cardboard, plastic, etc.
20. Do not cover crumb tray or any part of the oven with metal foil. This will cause overheating of the oven.
21. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities. Or lack of experience and knowledge unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
22. Do not leave unit unattended while in use.
23. Children should be supervised to ensure that they do not play with the appliance.

24. The appliance is not intended to be operated by means of an external timer or separate remote-control system.
25. The rear surface of appliance shall be placed against a wall.

**SAVE THESE INSTRUCTIONS  
HOUSEHOLD USE ONLY**

**SHORT CORD INSTRUCTIONS**

1. A short power-supply is provided to reduce risks resulting from entanglement or tripping over a longer cord.
2. Longer detachable power cords or extension cords are available and may be used if care is exercised in their use.
3. If a longer extension cord is used:
  - a. The marked electrical rating of the detachable power supply cord or extension cord should be at least as great as the electrical rating of the appliance.
  - b. Arrange the longer cord so that it will not drape over the countertop or table top where it can be pulled on by children or tripped over unintentionally.

**CAUTION:** This appliance has a polarized plug (one blade is wider than the other). As a safety feature to reduce the risk of electric shock, this plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to defeat this safety feature.



**CAUTION: HOT SURFACE**

**BEFORE FIRST USE**


1. Remove all accessories and shipping materials packed inside the oven.
2. Wash the rack and pan in warm soapy water. Wipe the inside of the oven with a damp cloth or sponge. Blot dry with paper towels to be sure the unit is dry before using.
3. Place oven on a flat counter or other stable surface. **DO NOT OPERATE ON THE SAME CIRCUIT WITH ANOTHER APPLIANCE.**
4. Position oven so that it is at least 2 inches from any surrounding object. Ensure nothing is placed on top of the oven.
5. Make sure the crumb tray is properly installed before using.

For the first time only, set the temperature knob to MAX, the function setting on toast and the timer to 15 minutes. This will burn off any oils that remained from production.

**NOTE:** the oven may smoke during this process. This is normal for a new oven and will not last more than 10-15 minutes

## NAME OF PARTS


1. Housing
2. Temperature knob
3. Power indicator light
4. Function knob
5. Timer knob
6. Foot
7. Door handle
8. Glass door
9. Heating element
10. Crumb tray
11. Baking rack
12. Baking tray

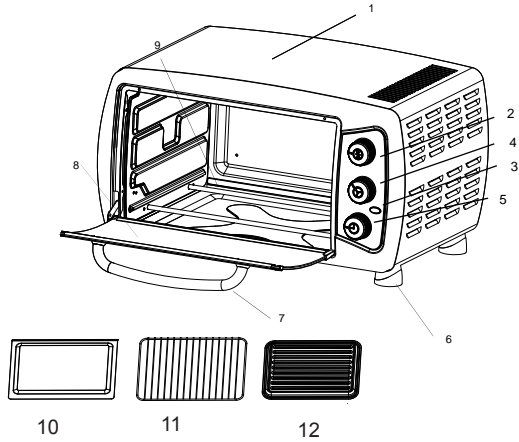

## CONTROL SETTINGS





### TEMPERATURE SETTING

- Turn temperature knob clockwise to desired temperature setting.
- Temperature range is 150°F to 450°F.

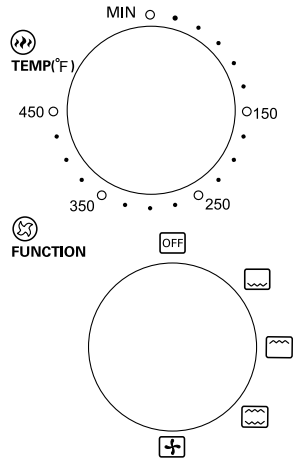

### FUNCTION SETTING

    4 different operating functions for versatile cooking:

- BAKE : lower heating element only
- BROIL : upper heating element only
- TOAST : both lower and upper heating elements
- CONVECTION : both lower and upper heating elements with motor fan.

### TIME SETTING (0-120 minutes)

- The timer can be set up to 120 minutes.
- The oven will not turn on without the timer being set.
- When the timer knob is in the OFF position, the oven will not operate.
- To set the time, turn the knob clockwise to the desired time.
- Indicator is lit only when time has been set.
- When the timer reaches the OFF position, a “ding” sound will be heard.
- Power supply will cut off automatically.

### TIME ADJUSTMENT


- To adjust timer during cooking cycle, simply turn the knob to the new desired time.

NOTE: if cooking time is to be less than 40 minutes, first turn knob past 40, then turn back (counter-clockwise) to the desired time.

### STAY ON

- To use the oven without timer control, turn the Timer knob to “STAY ON” position.
- In this position, unit will operate until the timer knob is manually set to “OFF” position.

NOTE: When toasting, food items may catch on fire if cooked too long. Close supervision is necessary when used in the Stay on operation.

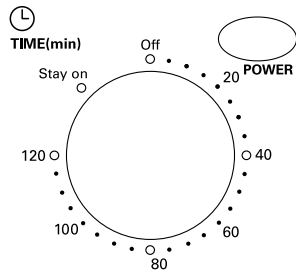

## OPERATING INSTRUCTIONS

CAUTION: THE OVEN SURFACES ARE HOT DURING AND AFTER USE.

1. Place the baking rack in the appropriate slot that will accommodate the height of the food to be cooked.
2. Set the food on the rack. Make sure that an ovenproof container is used.
3. DO NOT allow juices to drip onto bottom of the oven. Always have the Crumb tray in place.
4. Set the cooking temperature as suggested by the recipe or as desired.
5. Select cooking function: BAKE (☐), BROIL (☐), TOAST (☐), or CONVECTION (☐).
6. Securely shut the door and set the cooking time to begin cooking.

NOTE:

- Do not use plastic or cardboard containers. Do not use glass or ceramic pans or lids.
- Check food temperatures before removing to ensure the proper internal temperatures have been reached.
- Always remove food with oven mitts. Food and oven are very hot.

## **CLEANING:**

**Always unplug from wall outlet before cleaning and allow unit to cool completely.**

1. Wash accessories with mild, soapy water (Rack, Baking Tray, Crumb Tray)
2. Do not use abrasive cleaners, scrubbing brushes or chemical cleaners as they will cause damage to the non-stick coating of the Baking Tray.
3. Use a damp cloth to wipe the inside of the oven.
4. Door can be cleaned with a wet cloth saturated with mild detergent. Wipe clean.
5. Never immerse this oven in water or place in dishwasher. Make sure the electrical connections do not get wet.

## **TECHNICAL SPECIFICATIONS:**

Power:	1,500W
Main voltage:	120V ~ 60Hz
Capacity:	25 Liters
Unit dimension:	18.90" W x 15.28" D x 10.83"H
Cavity dimension:	13.29" W x 12.74" D x 9.45"H

## **ENVIROMENT:**

Dispose packaging materials, such as plastic and carton, in the appropriate waste bins.

When this product reaches the end of its useful life, do not dispose with general household waste. For the correct collection and treatment of this product, take them to the collection point for reuse of electrical and electronic equipment. Contact your local authority for the appropriate collection point in your neighborhood.



## Y o u r   G u a r a n t e e

If this product is found to be faulty as a result of faulty materials or workmanship within one year from date of purchase, it will be repaired free of charge.

This guarantee is subject to the following terms:

- Sunpentown must be notified of the fault.
- Proof of purchase must be presented to Sunpentown's nominated representative.
- The warranty will be void if the product is modified, misused or repaired by an unauthorized person.
- The warranty after repair will not be extended beyond the original one-year period.
- All replacement parts will be new or reconditioned.
- Parts, which are replaced, become the property of Sunpentown.
- The warranty applies for the use of the product in the USA only.

What is NOT COVERED:

- Warranty does not include freight charges.
- Incidental or consequential damage caused by possible defects with this product.
- Damage to product caused by improper power supply voltage, accident, fire, floods or acts of nature.
- Failure of product resulting from unauthorized modifications to the product.
- Improper installation or failure to perform the necessary maintenance.

This GUARANTEE is in addition to your Statutory Rights

**SUNPENTOWN INTERNATIONAL INC.**  
**14625 Clark Ave. City of Industry, CA 91745**  
**Tel: 800-330-0388**  
**service@sunpentown.com**  
[www.sunpentown.com](http://www.sunpentown.com)