

## 6 / MAINTENANCE

- Unplug and let cool before cleaning.
- Wipe surface with damp cloth. If excessively dirty, soak cloth in a mild detergent and water mixture.
- Do not clean with metal scouring pads, abrasives or solvents.
- Do not immerse cord or unit in water or other liquids.



## 7 / TROUBLESHOOT

PROBLEM	CHECK
No power or unit does not respond.	<ul style="list-style-type: none"> <li>● Is cooktop firmly plugged into a correct outlet?</li> <li>● Please check circuit breaker.</li> </ul>
Indicator light flashes and does not heat	<ul style="list-style-type: none"> <li>● Using a suitable cookware?</li> <li>● Pan may not be centered or smaller than 4 inches.</li> </ul>
Unit suddenly stops heating during operation	<ul style="list-style-type: none"> <li>● Are the air vents blocked? Check if dust or grease is clogging the vents.</li> <li>● Check if the fan is still running.</li> <li>● Unit overheated and the auto shut-off protection kicked in. Wait for unit to cool down.</li> </ul>

△ If after reviewing the above and problem is not resolved, do not attempt to repair yourself. Contact Sunpentown Customer Service: 800-330-0388

## 8 / SPECIFICATION

MODEL	SR-141R	SR-226R
VOLTAGE	120V / 60Hz	220V / 60Hz
POWER	1400W / 11.8A	2100W / 9.5A
NET WEIGHT	4.63 LBS	
CORD LENGTH	4.8 FT	
DIMENSION	10.43L x 8.86W x 3.35H inches	

## 9 / WARRANTY

### Your Guarantee

If this product is found to be faulty as a result of faulty materials or workmanship within one year from date of purchase, it will be repaired free of charge.

This guarantee is subject to the following terms:

- Sunpentown must be notified of the fault.
- Proof of purchase must be presented to Sunpentown's nominated representative.
- The warranty will be void if the product is modified, misused or repaired by an unauthorized person.
- The warranty after repair will not be extended beyond the original one-year period.
- All replacement parts will be new or reconditioned.
- Parts, which are replaced, become the property of Sunpentown.
- The warranty applies for the use of the product in the USA only.

What is NOT COVERED:

- Warranty does not include freight charges.
- Incidental or consequential damage caused by possible defects with this product.
- Damage to product caused by improper power supply voltage, accident, fire, floods or acts of nature.
- Failure of product resulting from unauthorized modifications to the product.
- Improper installation or failure to perform the necessary maintenance.


This GUARANTEE is in addition to your Statutory Rights

SUNPENTOWN INTERNATIONAL INC.  
14625 Clark Ave. City of Industry, CA 91745  
Tel: 800-330-0388  
service@sunpentown.com

Mr. Induction®

## Mini Induction Cooktop


SR-141R (120V)  
SR-226R (220V)

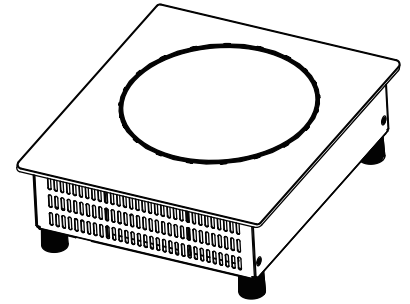

## INSTRUCTIONS MANUAL



## 1 / HOW TO USE

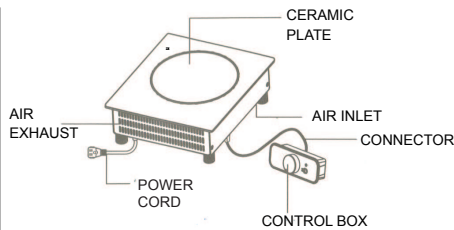

### OPERATION

#### CONTROL PANEL



1. Plug in power cord, unit will beep to indicate power.
2. ON/OFF button
  - Press to turn on unit.
  - Indicator light under Power Level travels back and forth.
  - Press again to turn unit off. Note: Fan will continue to run until unit is cooled down.
3. Press either - or + and Power Level indicator will stop in the middle. Press - or + again to set desired power level.

#### CONTROL BOX



1. Plug in power cord, unit will beep to indicate power.
2. Press the On/Off button on the control panel to turn on unit.
3. Power level can be adjusted by (a) pressing the + or - buttons on the control panel or (b) by turning the control knob on the control box. The unit will respond to the latest action. Power level indicator on the control panel will reflect accordingly.
4. Press the On/Off button on the control panel to power off.

#### NOTE


- Unit will beep as warning if it senses an empty cookware is being heated.

## 2 / SAFEGUARDS

- Do not immerse cord or appliance in water or other liquid; or use in a wet outdoor environment.
  - Do not use on or near a hot gas or electric burner.
  - Place unit on a leveled surface and with at least 4 inches of clearance all around.
  - May cause interference to radio or television reception if placed within close proximity.
  - Due to the magnetic heating of the unit, keep objects that may be affected away, such as credit card, watch, etc.
  - Do not share outlet with other appliances.
  - Do not heat unopened cans of food. The container could explode.
  - Never insert foreign objects into the air inlet or outlet vents.
  - Do not heat empty containers on the cooktop.
- WARNING**  
△ Do not place metal objects (forks, knives, lid, etc) on the cooktop other than cookware. They may become very hot during cooking.  
△ This unit emits an electromagnetic field. People with pacemakers should consult with their physician before using.

## 3 / COOKWARES

- Unsuitable cookware forms and shapes.

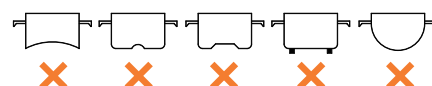


- Suitable cookware: 4.7" minimum diameter with a flat surface.



## 4 / INSTALLATION

Built-in Installation - Cut-out opening:

Unit 9.76 x 8.19 in (248x208 mm)  
Control Box 4.92 x 1.61 in (125x41mm)

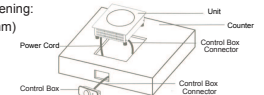

#### WARNING :

Exhaust vent should have a minimum 4" of clearance.

\*Flush mount available as optional purchase, Model: AP-1937.  
Please visit [www.spt-usa.com](http://www.spt-usa.com) or call 1-800-330-0388.

## 5 / SAFETY POINTS

- The ceramic plate will retain heat from the cookware; never touch the ceramic plate immediately after use.
- Do not place paper or cloth in between the cooktop and cookware.
- Never pour hot oil into cookware that is in use on the cooktop.
- Do not damage the ceramic plate. Be careful not to drop anything onto the ceramic plate. If the plate is broken or cracked, stop using immediately. Turn unit off and unplug.
- Do not heat aluminum foil on the cooktop.